



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-T70. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-T70 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CYBER-SHOT DSC-T70  
User guide SONY CYBER-SHOT DSC-T70  
Operating instructions SONY CYBER-SHOT DSC-T70  
Instructions for use SONY CYBER-SHOT DSC-T70  
Instruction manual SONY CYBER-SHOT DSC-T70

**SONY**

**Cyber-shot**

**Digital Still Camera**

**Cyber-shot Handbook**

**DSC-T70/T75/T200**

Before operating the unit, please read this Handbook thoroughly together with the "Instruction Manual" and the "Cyber-shot Step-up Guide", and retain them for future reference.

▼CLICK!

	Table of contents
	Basic Operations
	Using functions for shooting
	Using functions for viewing
	Customizing the settings
	Viewing images on a TV
	Using your computer
	Printing still images
	Troubleshooting
	Others
	Index

© 2007 Sony Corporation

3-219-480-11(1) GB



[Your user manual](#)  
[SONY CYBER-SHOT DSC-T70](#)

### **Manual abstract:**

35 Deleting images 37 Learning the various functions HOME/Menu . 39 Menu items . 42 Using functions for shooting Switching the shooting mode 43 Shooting images using Scene Selection. 44 Shooting menu 47 REC Mode: Selecting the continuous shooting method EV: Adjusting the light intensity Focus: Changing the focus method Metering Mode: Selecting the metering mode White Balance: Adjusting the color tones Color Mode: Changing the vividness of the image or adding special effects Flash Level: Adjusting the amount of flash light Red Eye Reduction: Reducing the red-eye phenomenon Face Detection: Detecting the face of subject SteadyShot: Selecting the anti-blur mode Setup: Selecting the shooting settings 4 Table of contents Using functions for viewing Playing back images from the HOME screen .54 (Single Image): Playing back a single image (Image Index): Playing back a list of images (Slideshow): Playing back a series of images Viewing menu57 (Retouch): Retouching still images (Paint): Painting on still images (Multi Resizing): Changing the image size according to usage (Wide Zoom Display): Displaying still images in 16:9 (Slideshow): Playing back a series of images (Delete): Deleting images (Protect): Preventing accidental erasure : Adding a Print order mark (Print): Printing images using a printer (Rotate): Rotating a still image (Select Folder): Selecting the folder for viewing images (Volume Settings): Adjusting the volume Painting or putting stamps on still images (Paint)65 Customizing the settings Customizing the Manage Memory feature and the Settings 67 Manage Memory 68 Memory Tool -- Memory Stick Tool68 Format Create REC.Folder Format Change REC.Folder Copy Memory Tool -- Internal Memory Tool .70 Settings 71 Main Settings -- Main Settings 171 Beep Function Guide Initialize Calibration Housing Main Settings -- Main Settings 273 USB Connect COMPONENT Video Out TV TYPE 5 Table of contents Shooting Settings -- Shooting Settings 1. 75 AF Illuminator Grid Line Auto Orientation Auto Review AF Mode Digital Zoom Smile Level Shooting Settings -- Shooting Settings 2. 78 Clock Settings.

79 Language Setting . 80 Viewing images on a TV Viewing images on a TV . 81 Viewing images by connecting your camera to a TV with the supplied cable for multi-use terminal 81 Viewing an image by connecting your camera to a HD TV. 83 Using your computer Enjoying your Windows computer. 85 Installing the software (supplied) 87 On the "Picture Motion Browser" (supplied) 89 Copying images to your computer using the "Picture Motion Browser" 90 Copying images to a computer without "Picture Motion Browser" 94 Viewing image files stored on a computer with the camera copying to the "Memory Stick Duo" 96 Using the "Music Transfer" (supplied).

97 Using your Macintosh computer . 98 Viewing "Cyber-shot Step-up Guide" 100 Printing still images How to print still images 101 Printing images directly using a PictBridge compliant printer . 102 Printing at a shop 105 6 Table of contents Troubleshooting Troubleshooting.107 Warning indicators and messages 117 Others Using your camera abroad -- Power sources.120 On the "Memory Stick Duo".

121 On the battery pack .123 On the battery charger 124 On Cyber-shot Station.125 Index Index127 7 Basic techniques for better images Focus Exposure Color Quality Flash This section describes the basics so you can enjoy your camera. It tells you how to use various camera functions such as the HOME screen (page 39), the menus (page 41), and so on. Focus Focusing on a subject successfully When you press the shutter button halfway down, the camera adjusts the focus automatically (Auto Focus). Remember to press the shutter button only halfway down. Press the shutter button fully down suddenly. Press the shutter button halfway down. Then press the shutter button fully down. AE/AF lock indicator flashing , lit/beeps To shoot a still image difficult to focus on t [Focus] (page 31) If the image looks blurred even after focusing, it may be because of camera shake.

t See "Hints for preventing blur" (as follows). 8 Basic techniques for better images Hints for preventing blur The camera moved accidentally when you took the picture. This is called "Camera shake." On the other hand, if the subject moved when you took the picture, it is called "subject blur..



[Your user manual](#)  
[SONY CYBER-SHOT DSC-T70](#)